

Instructions

Smoke & Drink Topper

1



Pour your desired drink or Cocktail into your glass.

2




Place Topper securely on top of your cocktail glass.

3



Add 2-3 pinches of Smoke & Drink wood shavings into the burn chamber.

4

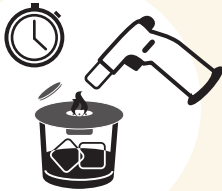

Light shavings in the burn chamber for 2-3 seconds.

5



Place lid securely on the Topper and let smoke fill the glass for 1-2 minutes or desired flavour.

6



Remove Topper once cooled. Enjoy!

Note

- Read Smoke & Drink® instructions before use and save for future reference.
- Keep Smoke & Drink® Topper clear of heat sensitive materials.
- Do not leave the Smoke & Drink® Topper unattended when in use.
- Do not touch hot surfaces.
- Do not attempt to burn anything other than small wood chips and/or wood shavings provided by Smoke & Drink®.

IMPORTANT SAFEGUARDS READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Remove any packaging material and promotional labels and clean using soap and water before using the Smoke & Drink® Topper for the first time.
 - Do not place the Smoke & Drink® Topper near the edge of a table, counter or bench top during operation. Ensure that the surface is level, clean and free of water.
 - Do not place any part of the Smoke & Drink Topper in a gas, electric or microwave oven or on a hot gas or electric burner.
 - Keep Smoke & Drink Topper® clear of walls, curtains and other heat or steam sensitive materials.
 - Do not leave the Smoke & Drink® Topper unattended when in use.
 - Do not touch hot surfaces.
 - Keep the product clean. Follow the care and cleaning instructions provided.
 - This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.
 - This product is intended for commercial and household use. Do not use this product for anything other than its intended use.
 - Do not use in moving vehicles or boats.
 - It is recommended to regularly inspect the product and make sure it is clean and in good working order.
 - Do not attempt to burn anything other than small wood chips and/or wood shavings provided by Smoke & Drink® or another provided that explicitly indicates safe for smoking food and/or drinks.
 - Do not overfill the burn chamber. The wood shavings should only fill about half of the burn chamber.
 - Use a handheld lighter or cooking torch to apply a flame to the top surface of the wood chips. Move the flame around to ignite the entire exposed surface. For best results make sure the burning area is evenly distributed or centred.
 - Use only in a well ventilated area; the burning of wood chips/ shavings may result in the emission of combustion by-products which are known to cause cancer, birth defects, and/or reproductive harm.
 - The metal lid and burn chamber of the Smoke & Drink Topper® can become very hot when in use. Allow device to cool completely before touching lid or burn chamber, cleaning, or storing.
 - Always use the Smoke & Drink Topper® in an upright position. Heated smoking materials may fall out of the burn chamber if tipped, resulting in a fire hazard.
 - Always empty ash and burnt material into a non-flammable receptacle.
 - Exercise proper care when igniting the smoking materials; improper ignition of flammable materials may result in explosion or fire hazard.
 - Always use a lighter or kitchen torch to ignite the materials in the Smoke & Drink Topper; DO NOT USE other heat device as the excessive heat may damage the unit.
 - Do not point the Smoke & Drink Topper® at any person or flammable object.
 - Avoid using the Smoke & Drink Topper® in areas where smoke may activate smoke alarms or fire suppression systems.
- ## CARE & CLEANING
- Before cleaning, make sure the unit is completely cooled down.
 - Do not use harsh abrasives or caustic cleaners when cleaning this product.
 - Remove the lid from the topper. Invert the topper and tap on a solid surface to remove any remaining wood chips or ash.
 - The Smoke & Drink Topper should be cleaned by hand with warm soapy water.